

on each line. After 64 consecutive break characters (6.4 seconds), the line is considered unplugged and additional interrupts are ignored, except to check for the character "ALT MODE." If a Teletype is eventually plugged into the line again, the user may regain service by typing the "ALT MODE" character.